

Multec Type Engine Control Unit with Immobiliser

This Engine Management ECU, must be coded to the immobiliser system fitted to the vehicle.

You can get the vehicle to run by unplugging the immobiliser unit from the car before starting. The warning lamp will flash continuously and the fault diagnosis system will report that the unit / immobiliser set has not been programmed.

The car can be driven in this condition, to enable it to be taken to a specialist who has access to the Vauxhall Dealer "TECH2" Equipment. The system can then be programmed for the immobiliser system to be fully armed.